




Their construction means that they need to be started at a slow speed and then ramped up to full speed.

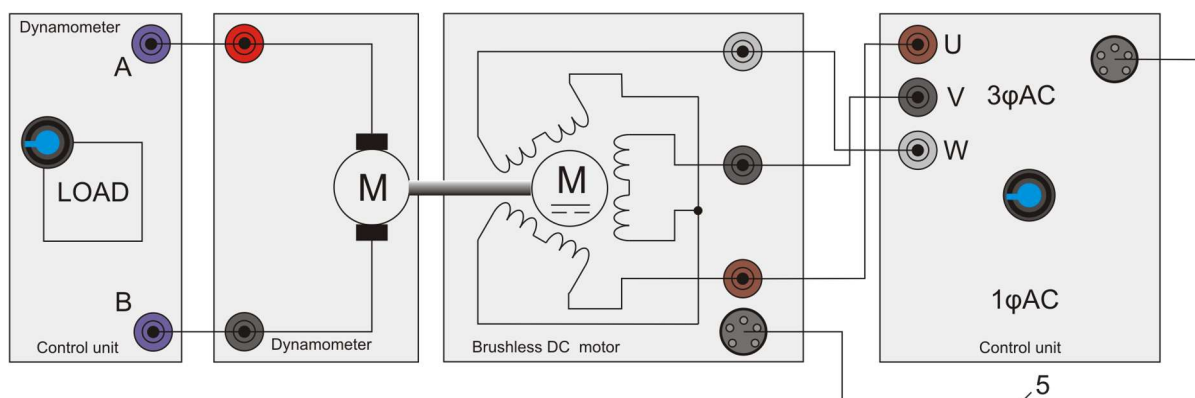


- 1) Set up the brushless motor, as shown in the diagram above. Don't forget to connect the brushless DC motor to the control unit with the 5-pin lead.
- 2) On your PC load 'Open Log_3phase.bat.'
- 3) With the initial frequency set to 40Hz, run the program to get a set of readings.
- 4) Repeat this step for drive frequencies of 50, 60, 70, and 80Hz.
- 5) On the next page, sketch the results.

[illegible]

Worksheet 20

Brushless DC motor

Modern electrical machines

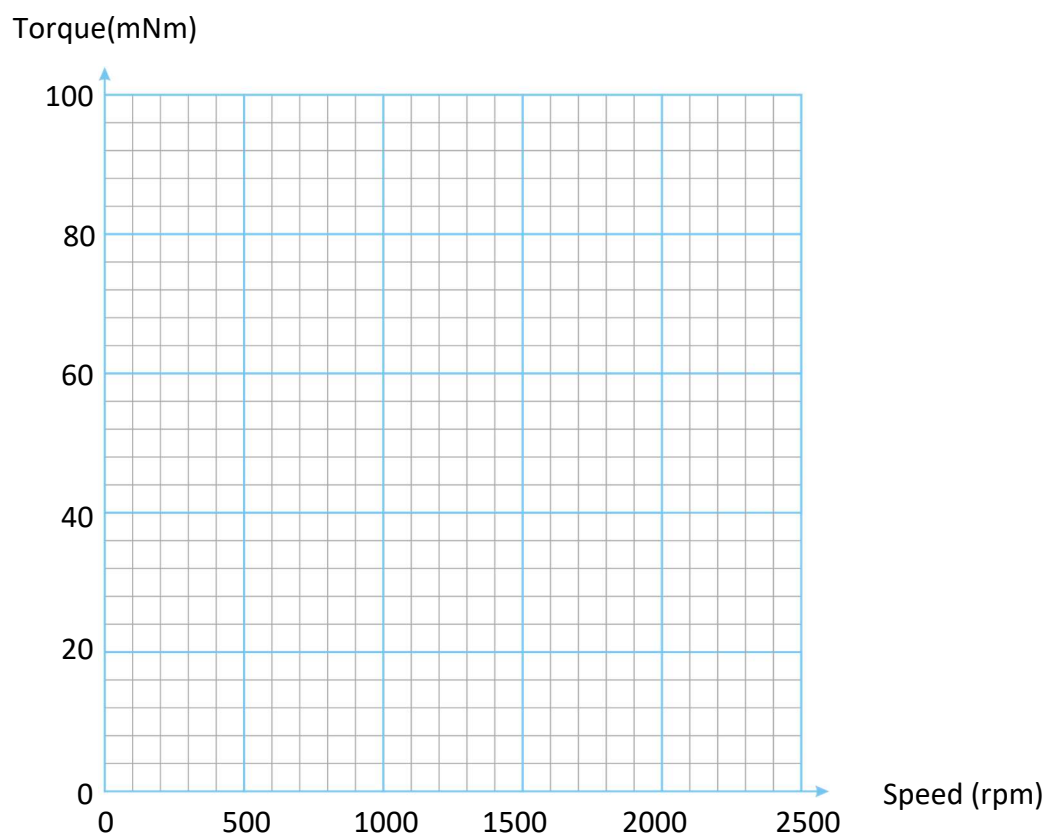

The effect of speed on torque for different values of output frequency.